


Franklin T10 Hotspots



To enable Hotspot

- Press and hold the Power button until the LCD screen displays **Welcome**
- When you see the T Mobile logo, short press the *Power button* to see the Wi-Fi name. Press it again for the Wi-Fi password (password is also on the back of the Hotspot).

To connect your device to the Hotspot's Wi-Fi

- Go to *your device's* Wi-Fi  setting and make sure that Wi-Fi is turned on
- Select **Franklin T10** from the list of available networks
- Type in the password (on back of Hotspot)

To turn off Hotspot (always turn off when not in use)

- Press and hold the Power button until the Hotspot displays **Goodbye**



To charge Hotspot

- Check battery icon on LCD screen to see if hotspot is fully charged (battery life is 8-10 hours)
- If battery is low, plug charger cable into hotspot and then into wall outlet - approximately 3 hours
Remove from outlet once it is fully charged!
- **IMPORTANT:** Do not leave Hotspot plugged into outlet or overcharge device!

Tips to maximize Internet browsing speed:

- Place the Hotspot in a location where signal strength is strongest (e.g. near a window)
- Keep it at least 4-6 feet away from other electrical devices such as cell phones, cordless phones, TVs and microwaves
- Keep it in a clear open space for best signal reception
- Connect as few devices to the Hotspot as is necessary
- Power the Hotspot off when it is not being used

Need further assistance? Call the library at 412-882-6622 or send an email to slimonl@einetwork.net